


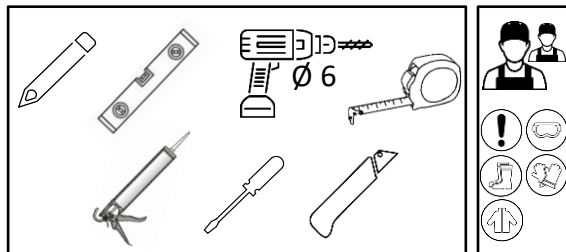





NOA


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions





1		ALU-U-CON150	1
2		SU45CH + SK2SET	1
3		3,5X35 SK1SET	4
4		DRdustHOR480	1
5		Spacer_NOA	1
6		6 mm Safety Glass + PROFILE	1

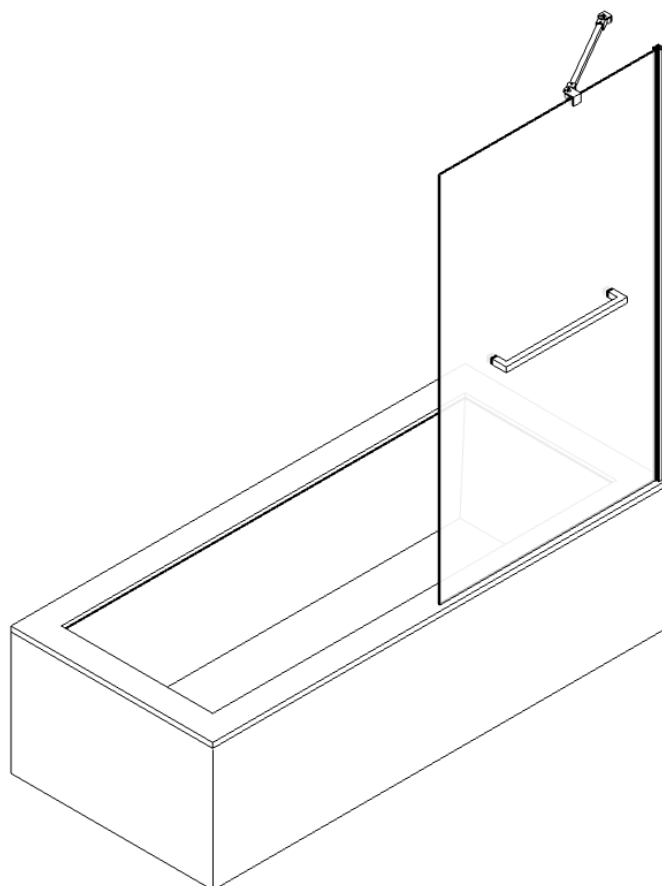

NOA	A (mm)	H (mm)
70NOA	655-670	1480
80NOA	755-770	1480
90NOA	855-870	1480
100NOA	955-970	1480
110NOA	1055-1070	1480
120NOA	1155-1170	1480



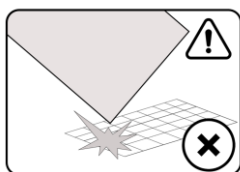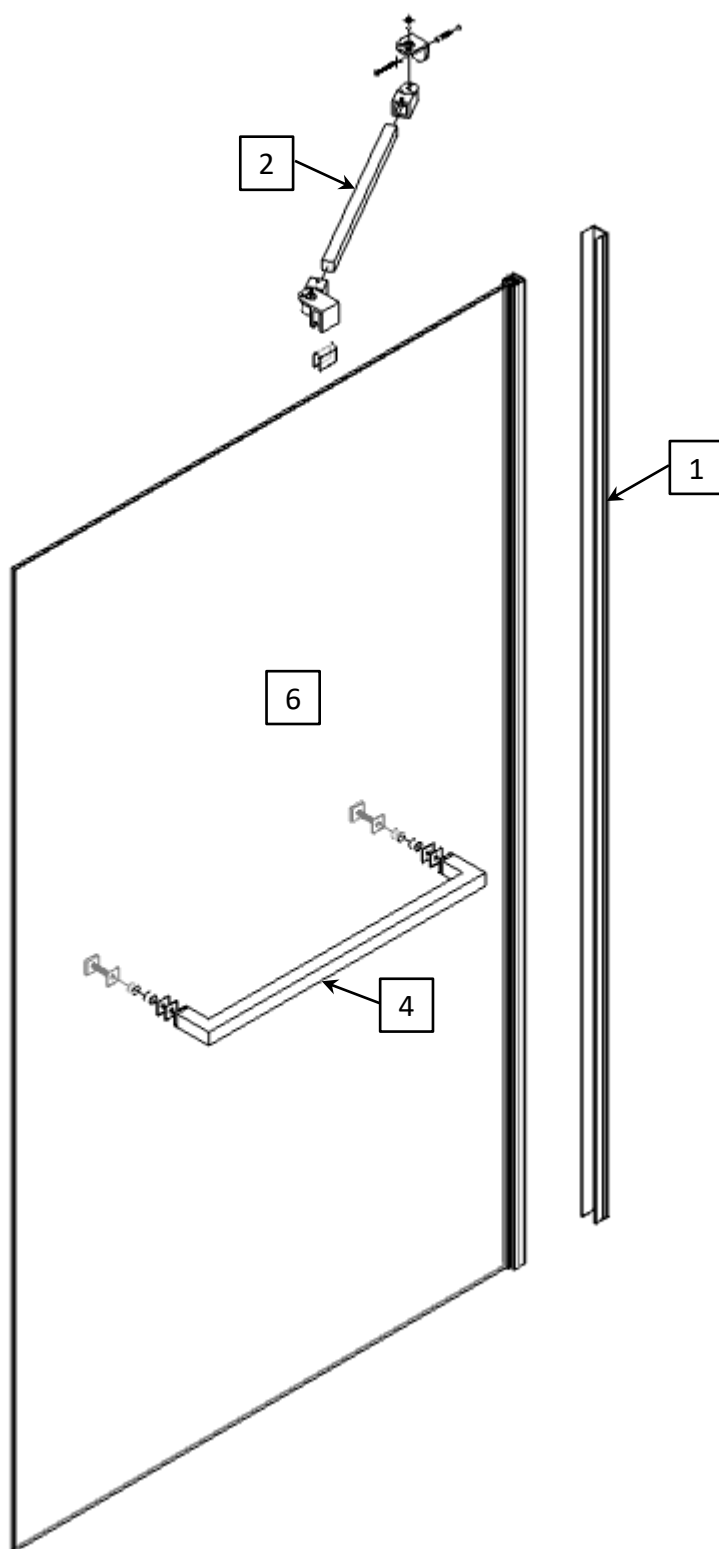

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

