







NORIS COR


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены



Bath screen installation instructions

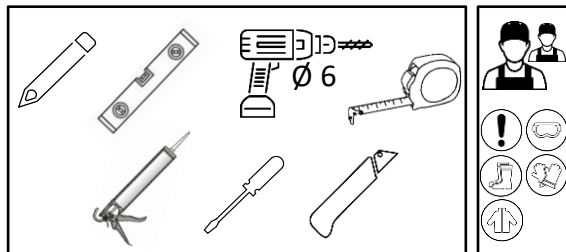

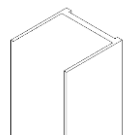1		ALU-U-CON150	1
2		U-SC22.500-ALCH	1
3		SU45CH + SK2SET	1
4		3,5X35 SK1SET	4
5		6 mm Safety Glass + PROFILE	1

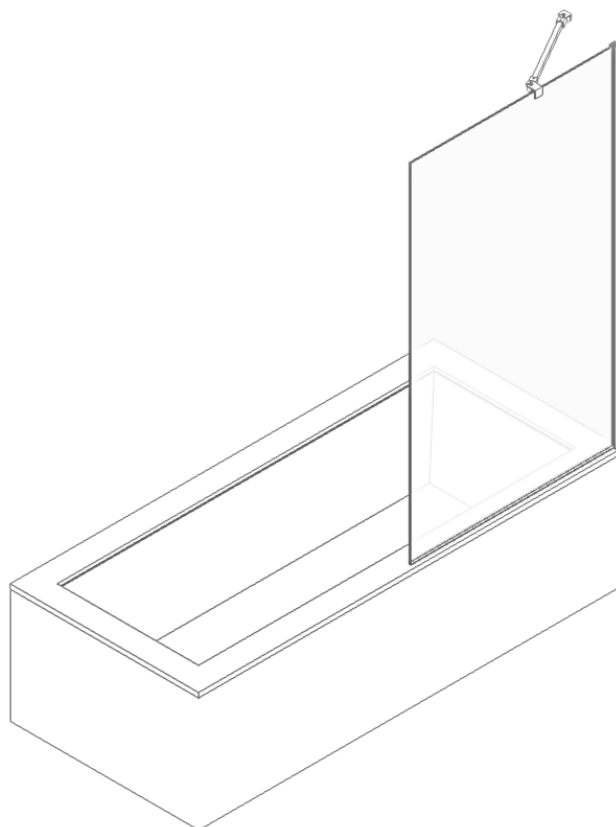

NORIS COR	A (mm)	H (mm)
70NOR+	660-670	1480
80NOR+	760-770	1480
90NOR+	860-870	1480
100NOR+	960-970	1480
110NOR+	1060-1070	1480
120NOR+	1160-1170	1480

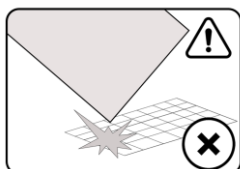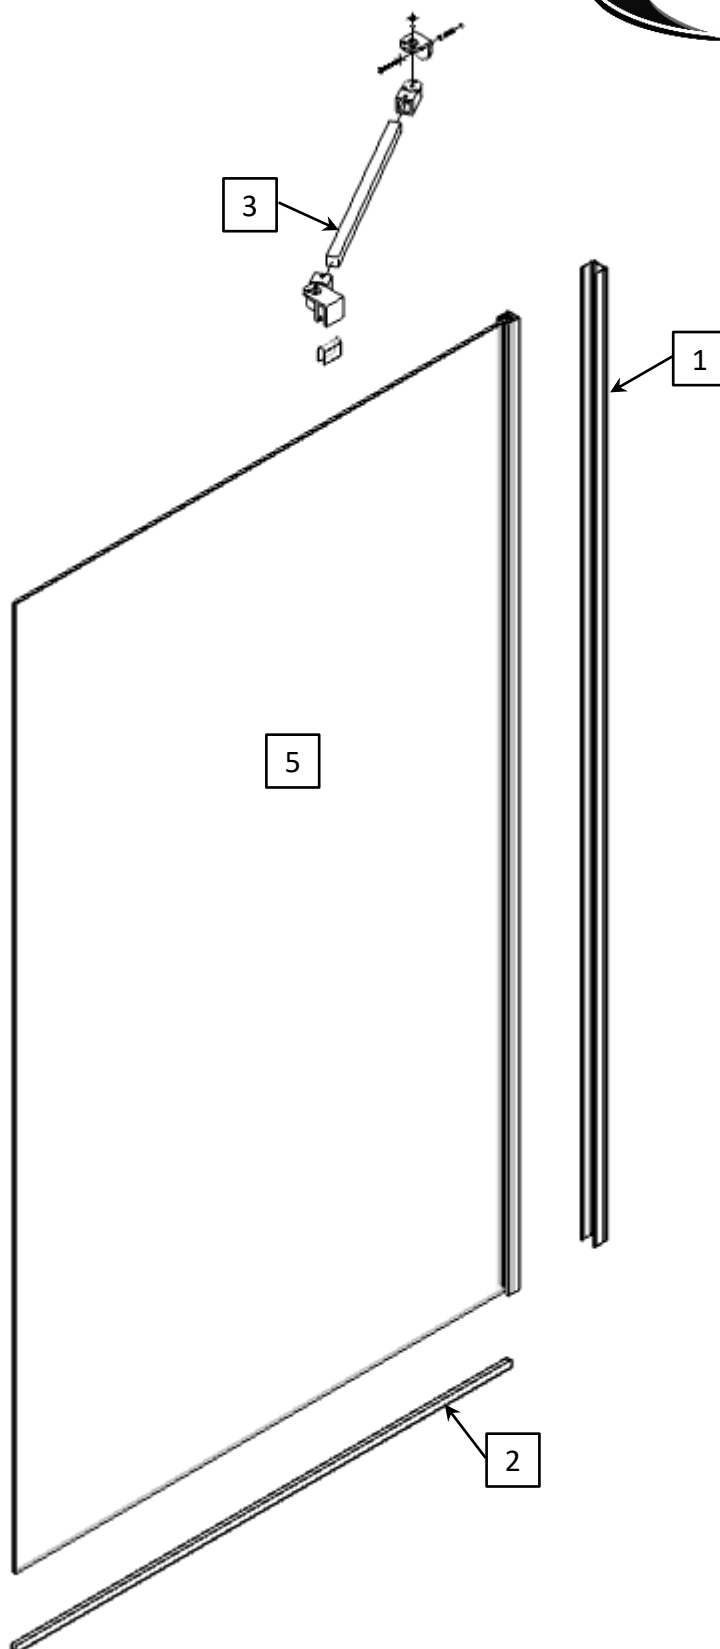

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

